



## Navigation


- The 8 buttons on the left and right sides of the screen are similar to an ATM machine. They will select the option that's on the screen next to it.
- When options for ◀ and ▶ appear, this will move your character selection to the left and right.
- When options for + and – appear, this will increase or decrease the value of the selected character or setting.
- The **BACK** button below the screen on the left will show you the previous screen.

## Temporary Access Codes

In the event you need to enter a password to get access to the headset system, please use these codes based on the current time of your system. Please note that they are only valid for **Sunday, March 8<sup>th</sup> 2020**:


1 AM/PM = 4844	7 AM/PM = 4842
2 AM/PM = 4847	8 AM/PM = 4845
3 AM/PM = 4843	9 AM/PM = 4848
4 AM/PM = 4846	10 AM/PM = 4841
5 AM/PM = 4849	11 AM/PM = 4844
6 AM/PM = 4840	12 AM/PM = 4847

1

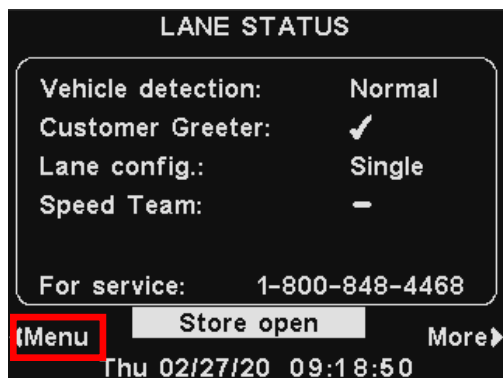

Push the **Menu** button. If you don't see this, push **BACK** until you do.


2

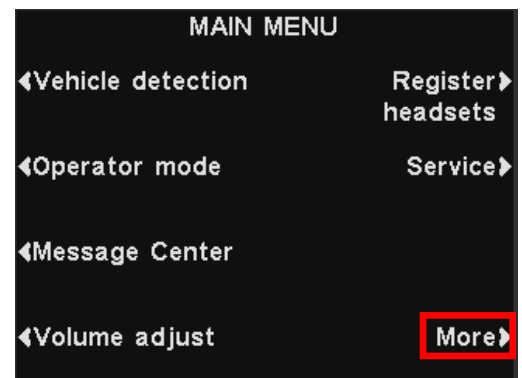

Push the **More** button.


If you have any additional issues or wish to speak with one of our technical support representatives, please call us at **844-921-3866**

3

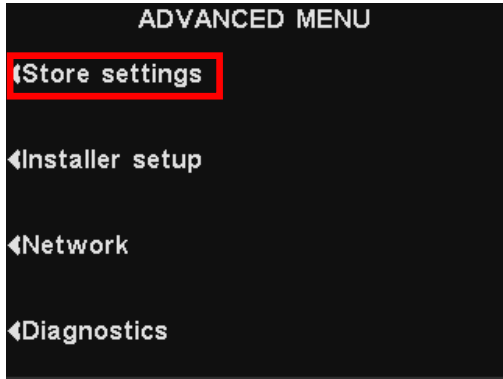

Push the Store settings button.

4

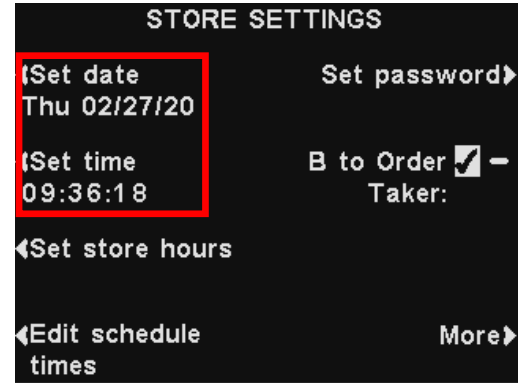

Push the Set date or Set time button.

## Set Date



## Set Time



To adjust both the Date and the Time, you will need to use the **left** and **right** arrow buttons to select the numbers you wish you change and use the **+** and **-** buttons to change them. Once you're finished, push the **BACK** button all the way back to the main screen to save it.